
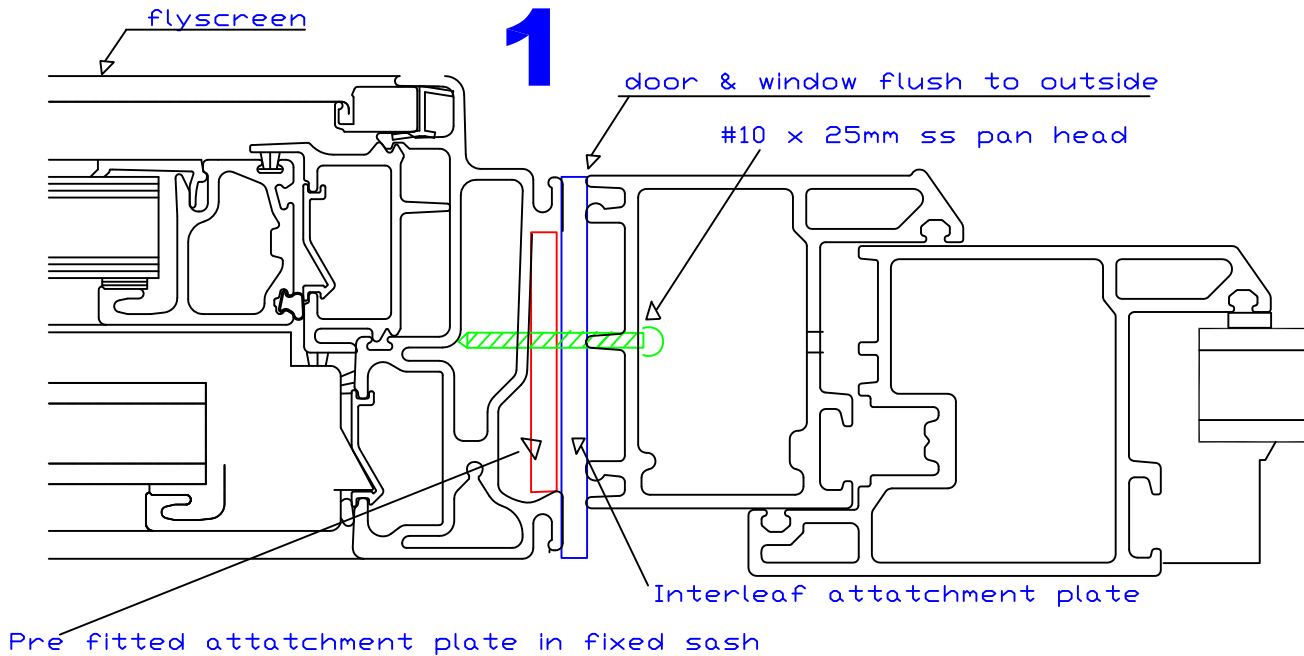


SOVEREIGN FIBREGLASS
 LOW THRESHOLD
 SERIES 301A FRENCH DOORS

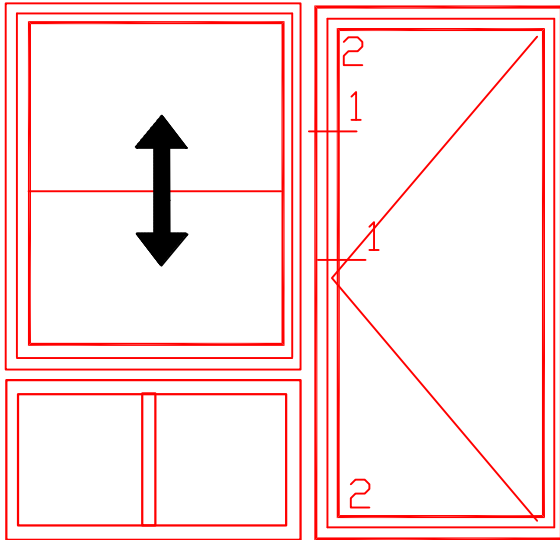

- 1 pre drill holes as indicated
- 2 positions possible at 50mm from top and bottom of the frame
and at mid height of the window frame